

Your Samsung GT-E3210



- 1.) 4-way navigation key
- 2.) Dial Key
- 3.) Voice mail service key
- 4.) Keypad lock key
- 5.) Softkeys
- 6.) Power/End Call Key
- 7.) Confirm Key
- 8.) Alphanumeric keys
- 9.) Silent profile key

Quick Start Guide



Classic World Phone


Samsung GT-E3210

24 Hour Customer Service (US) +1 212 785 5800

Support@mobal.com
<http://support.mobal.com>

mobal.com

Installing the SIM & Battery

 **The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.**



- 1 Place your finger in the recess at the bottom of the device, and carefully lift and open the back cover.



- 2 Lift the battery, and remove it. Insert the SIM card. Ensure the contact surface area is facing down and the beveled corner of the SIM card is facing the bottom of the device.



- 3 Replace the battery, simply ensure the gold contacts on the battery match up with the gold contacts on the phone. Snap the battery into place.



- 4 Replace the back cover, ensuring the sides are all clipped into place.

Charging the battery

Choose the relevant travel adaptor from your FREE Mobal set. For the US this would be travel adaptor 1.



Connect your charger to the wall outlet and then connect the charger to your phone.



The phone may not show any signs that it is charging. Do not worry this is normal.

You do not need to charge the battery for a specific length of time but we recommend charging the phone overnight.

Turn your phone on and off

To turn your phone on:

- 1.) Press and hold .
- 2.) To turn your phone off, repeat step 1 above.




Setting time and date

To set the date and time select:

Menu > Settings > Time and Date

You can then choose your time zone, set the time and the date.

Make a call

- 1.) Enter the phone number you wish to call and press .
- 2.) Go to contacts and select the contact you want to call and press .
- 3.) To end a call press .

Make an international call

The standard international dialing procedure is:



The “+” key represents the International Direct Dial code (IDD) for the country that you are calling from.

To get the “+” key hold down the zero  key until the “+” appears.

Add a new contact

To add a new contact:

Contacts > Create > Options > Create Contact

Enter the contact first name, last name and phone number

Save

Text Messaging

To write a text message:

Menu > Messages > Create Message

Select a contact from your list or enter the phone number that you wish to send the message to.

Write your message, the message length indicator shows you how many characters you are allowed to enter.

Send

To read an incoming text message:


Menu > Messages > Inbox > View

Delete messages:

Select Menu > Messages > Select Message > Options > Delete

 
Answer a call

1.) When a call comes in press .

 
2.) To end the call, press .

Keeping your phone secure

To lock your phones keypad:

Hold down the  key for 3 seconds. “Keypad Locked” will appear on the screen and now your phone is locked.

To unlock your phones keypad:

Hold down the  key for 3 seconds. “Keypad Unlocked” will appear on the screen and your phone is now active again.

Your handset has an auto keypad lock feature that automatically locks your keypad if your phone has been inactive for 10 seconds.

Setting the phone lock:

You can set your phone to require an 8 digit password when turned on to be able to access the phone. To activate the phone lock

Menu > Settings > Security > Phone Lock > Change

Enter 8 digit password

Ok

When you turn your phone back on you will be greeted with a password request to enter the phone.

Adjust the volume

Adjust the volume of your ringtone:

Menu > Settings > Sound Profiles > Select Profile >

Edit > Volume > Call Alert

Scroll left to decrease and scroll right to increase volume

Save

Adjust the volume during a call:

Scroll down to decrease volume or up to increase volume on the navigation key.

Change your ringtone

To change your ringtone:

Menu > Settings > Sound Profiles > Select Profile >

Edit > Voice call ringtone > Select Ringtone

Switch to another profile

To change your profile:

Menu > Settings > Sound Profiles > Select Profile

- Normal - Silent - Driving - Meeting - Outdoor